

CAMO[®]
The Better Way to Build a Deck

**NEW
PRODUCTS**

TRAINING GUIDE 2024



TRAINING GUIDE

CONTENTS

FASTENING SYSTEMS



CLIPDRIVE™

STAND-UP DECK CLIP FASTENING SYSTEM

THE BETTER WAY TO FASTEN CAMO UNIVERSAL DECK CLIPS.

PAGES 4-7

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



NEVER-MISS® GUIDE

DECK CLIP FASTENING SYSTEM

INCLUDED IN 450 CT AND 900 CT PAILS OF CAMO UNIVERSAL DECK CLIPS.

PAGES 8-17

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



DRIVE

STAND-UP 3-IN-1 FASTENING SYSTEM

SAVE TIME WITH THE AWARD-WINNING CAMO DRIVE® TOOL.

PAGES 18-25

FOR USE WITH CAMO COLLATED EDGE + FACE SCREWS OR CAMO UNIVERSAL DECK CLIPS



MARKSMAN®

HIDDEN EDGE SCREW FASTENING SYSTEM

ACHIEVE A FASTENER-FREE SURFACE ON SQUARE EDGE DECKING.

PAGES 32-37

FOR USE WITH CAMO EDGE SCREWS



ACCESSORIES

DECK TAPE

SELF-ADHESIVE LINED BUTYL TAPE



PAGES 38-39



BLOCK

THE BETTER FLOATING FOUNDATION

PAGES 40-43



PAGES 26-31 BOARD BENDING & LOCKING TOOL

ACCESSORIES



POWER BITS

DRIVE + CLIPDRIVE T-15

DRIVE T-20

DRIVER BITS

PRE-DRILL BIT

LEVER

Build a better deck by yourself with LEVER, the one-turn tool that locks-in rows of boards and clips and straightens warped boards.


INTRODUCTION	27
BENDING	28
LOCKING	30



Get to know your *LEVER* tool



ASSEMBLING YOUR TOOL

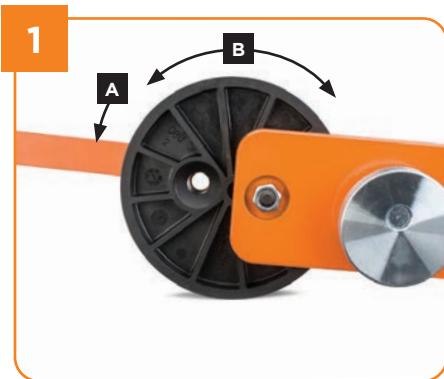

ALIGN

A) Straighten the handle.
B) Align the holes in the handle and cam by rotating the cam.



INSERT SCREW

Insert flathead screw from the bottom of board cam.



TIGHTEN

Use supplied hex key to securely tighten the screw.

Setup for bending warped boards

A SET THE JOIST TYPE—WOOD OR METAL



Loosen joist knob until the stop block disengages.



Rotate the stop block to the desired side, align the block with the holes, push back into place, and tighten the joist knob.

B SET THE JOIST WIDTH



Adjust the stop block to the proper joist width and tighten the knob.



The Single Joist setting accommodates joists 1½ in wide. The Double Joist setting accommodates joists 3 in wide.

How to bend warped boards



SCAN TO
WATCH THE
HOW-TO
VIDEO

1



SECURE BOARD

Get your board in place and fasten one end.

2



POSITION

Place LEVER on the joist at the opposite end of the board and tighten the joist cam with the pivot pin

3



BEGIN BENDING

Apply pressure by moving the handle towards the deck board.

4



CLOSE THE GAP

Keep turning until the board is in desired fastening position.


5



FASTEN

Fasten the board.

6

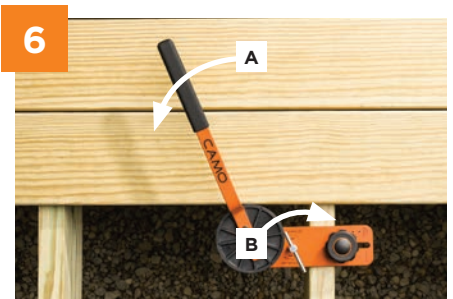


RELEASE & REMOVE

A) Release pressure by moving the handle away from the deck board.
B) Loosen the joist cam and remove LEVER.

Setup for locking boards and Clips

A SET THE JOIST TYPE—WOOD OR METAL

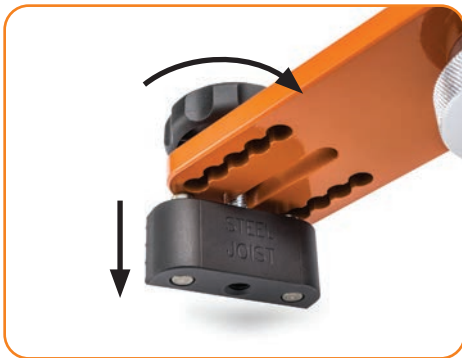

Loosen joist knob until the stop block disengages.



Rotate the stop block to the desired side, align the block with the holes, push back into place, and tighten the joist knob.

B SET THE JOIST WIDTH



Adjust the stop block to the proper joist width and tighten the knob.



The Single Joist setting accommodates joists 1½ in wide. The Double Joist setting accommodates joists 3 in wide.

How to lock boards

For the best experience with consistent board spacing, use 2-4 LEVER tools across the length of the deck.

1



PREPARE BOARDS

Lay down multiple rows of boards and CAMO Universal Deck Clips.

2



POSITION

Place LEVER on the joist and tighten the joist cam with the pivot pin

3



LOCK-IN

Apply pressure by moving the handle towards the deck board. Do not over-tighten as the boards can buckle.

4



FASTEN

Leave LEVER in place until all clips are fastened.

5



RELEASE

Release pressure by moving the handle away from the deck board.

6



REMOVE

Loosen the joist cam and remove LEVER.



CAMO[®]

The Better Way to Build a Deck

For more information, visit camofasteners.com or
contact us at 800-968-6245 or info@camofasteners.com.

ITEM #0345989