

**CAMO**<sup>®</sup>  
The Better Way to Build a Deck

**NEW  
PRODUCTS**

# TRAINING GUIDE 2024





# TRAINING GUIDE

## CONTENTS

### FASTENING SYSTEMS



#### CLIPDRIVE™

STAND-UP DECK CLIP FASTENING SYSTEM

THE BETTER WAY TO FASTEN CAMO UNIVERSAL DECK CLIPS.

PAGES 4-7

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



#### NEVER-MISS® GUIDE

DECK CLIP FASTENING SYSTEM

INCLUDED IN 450 CT AND 900 CT PAILS OF CAMO UNIVERSAL DECK CLIPS.

PAGES 8-17

FOR USE WITH CAMO UNIVERSAL DECK CLIPS



#### DRIVE

STAND-UP 3-IN-1 FASTENING SYSTEM

SAVE TIME WITH THE AWARD-WINNING CAMO DRIVE® TOOL.

PAGES 18-25

FOR USE WITH CAMO COLLATED EDGE + FACE SCREWS OR CAMO UNIVERSAL DECK CLIPS



#### MARKSMAN®

HIDDEN EDGE SCREW FASTENING SYSTEM

ACHIEVE A FASTENER-FREE SURFACE ON SQUARE EDGE DECKING.

PAGES 32-37

FOR USE WITH CAMO EDGE SCREWS



### ACCESSORIES

#### DECK TAPE

SELF-ADHESIVE LINED BUTYL TAPE



PAGES 38-39



#### BLOCK

THE BETTER FLOATING FOUNDATION

PAGES 40-43



PAGES 26-31 BOARD BENDING & LOCKING TOOL

#### ACCESSORIES



POWER BITS

DRIVE + CLIPDRIVE T-15

DRIVE T-20

DRIVER BITS

PRE-DRILL BIT


# UNIVERSAL DECK CLIPS

CAMO Universal Deck Clips make installing grooved decking on wood and metal joists easy for everyone. These hidden deck clips are designed and warranted for use with leading grooved decking and result in a beautiful fastener-free surface that you can install in half the time of other hidden fasteners. Fasten EDGE™, WEDGE™, and WEDGEMETAL® Clips by hand with the included NEVER-MISS® Guide, or, for the best experience, standing up with ClipDRIVE™ or DRIVE.

<b>INTRODUCTION</b>	<b>9</b>
<b>STARTER</b>	<b>10</b>
<b>EDGE</b>	<b>12</b>
<b>WEDGE</b>	<b>14</b>
<b>WEDGEMETAL</b>	<b>16</b>



# Get to know your Clips

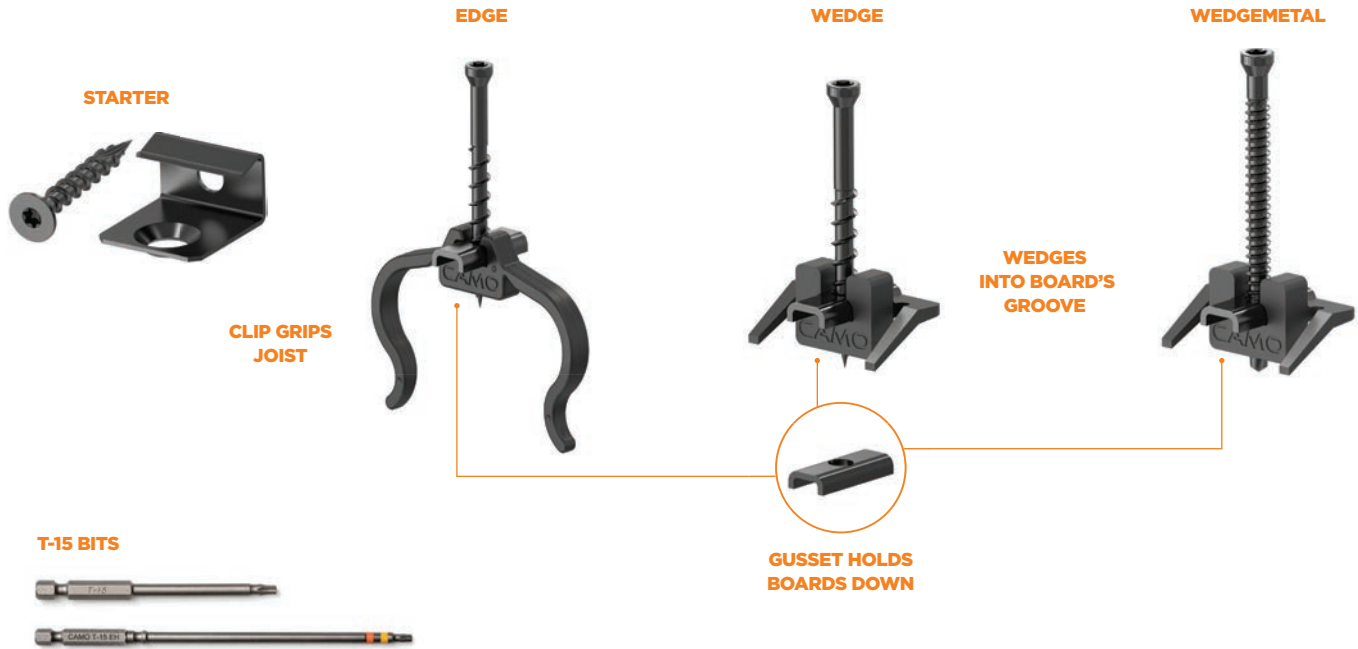

## WHICH CLIPS SHOULD I USE?

CLIP TYPE	90° PATTERNS	ANY PATTERN
	<b>STARTER CLIPS</b>	✓
<b>EDGE CLIPS</b>	✓	X
<b>WEDGE CLIPS</b>	✓	✓
<b>WEDGEMETAL CLIPS</b>	✓	✓

GROOVED BOARD TYPE	
<b>COMPOSITE</b>	✓
<b>PVC</b>	✓
<b>CAPPED COMPOSITE</b>	✓
<b>HARDWOOD</b>	✓

Please reference our specific board installation instructions by board type on page 56

# Setup for STARTER Clips



## A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

## B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary to fully drive screw.



# How to fasten STARTER Clips



1



## FASTEN CLIP ON JOIST

Place clip on the joist, centered with the cross joist, and fasten.

2



## REPEAT

Install a STARTER Clip at every joist.

3



## PLACE BOARD

Tilt board up slightly to set it in the clips.

4



## LAY BOARD DOWN

Gently push the board down to lock it in place.

# Setup for EDGE Clips



## A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

## B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary.



# How to fasten EDGE Clips



## BEFORE YOU BEGIN

Fasten your first board with CAMO STARTER Clips (p. 11).



SCAN TO  
WATCH THE  
HOW-TO  
VIDEO

1



## PLACE CLIP ON JOIST

Place a clip on the joist with the gusset in the groove. Clips stay in place until you're ready to fasten.

2



## REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.

3



## SLIDE ON NEXT BOARD

Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.

4



## LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).



5



## FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included IN 450 ct and 900 ct) over the screw head, connect the bit to the head and drive until clip is snug. **Do not overdrive.** Repeat until all inner boards are fastened.



## OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on page 7.



# Setup for WEDGE Clips



## A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

## B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary to fully drive screw.

# How to fasten WEDGE Clips



## BEFORE YOU BEGIN

Fasten your first board with CAMO STARTER Clips (p. 11).



1

## WEDGE INTO GROOVE

Tilt the WEDGE Clip so the lower prongs enter the groove first. Tilt the clip back up to wedge into the groove. Clips stay in place until you're ready to fasten.



2

## REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.



3

## SLIDE ON NEXT BOARD


Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.



4

## LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).

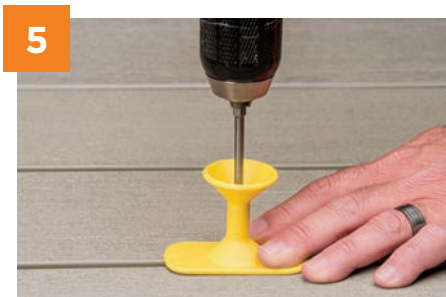

5

## FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included in 450 and 900 ct) over the screw head, connect the bit to the head and drive until clip is snug. **Do not overdrive.** Repeat until all inner boards are fastened.



## OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on pages 7.



# Setup for WEDGEMETAL Clips



## A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

## B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary to fully drive screw.

# How to fasten WEDGEMETAL Clips



1



## WEDGE INTO GROOVE

Tilt the WEDGEMETAL Clip so the lower prongs enter the groove first. Tilt the clip backup to wedge into the groove. Clips stay in place until you're ready to fasten.

2



## REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.

3



## SLIDE ON NEXT BOARD

Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.

4



## LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).



5



## FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included in 450 ct AND 900 ct) over the screw head, connect the bit to the head and drive. Repeat until all inner boards are fastened.



## OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on pages 7.





**CAMO<sup>®</sup>**

**The Better Way to Build a Deck**

For more information, visit [camofasteners.com](http://camofasteners.com) or  
contact us at 800-968-6245 or [info@camofasteners.com](mailto:info@camofasteners.com).

ITEM #0345989